

Liquid Analysis Sensor Mounting, Wiring, and Calibration Accessories



Emerson offers a wide selection of accessories to enable convenient installation and calibration of its liquid analysis instrumentation. This data sheet includes a variety of adapters for mounting pH, ORP, conductivity, chlorine, ozone, and dissolved oxygen sensors. Also included are junction boxes and extension cables for applications requiring long distance wiring, as well as calibration buffer and standard solutions for pH, ORP, and conductivity sensors.

Accessory compatibility

The compatibility for each mounting accessory is limited to the sensor models stated in the corresponding data tables.

Contents

Accessory compatibility.....	2
Insertion mounting adapters for NPT threaded sensors.....	3
Insertion mounting adapters for 1-inch diameter retractable sensors.....	6
Tri Clamp mounting adapters.....	8
In-line tee mounting adapters.....	9
Standard retraction assemblies.....	11
High pressure retraction assemblies.....	14
Low flow cells	18
Low flow panel.....	20
Rotameters for sample flow control.....	22
Submersion mounting adapters.....	23
HandRail mounting systems.....	23
Jet spray cleaner.....	24
Junction boxes and preamplifiers	26
Extension cable for long distance sensor wiring.....	29
Calibration buffers and standard solutions.....	30
Conductivity Validation Unit.....	31

Insertion mounting adapters for NPT threaded sensors


Use these adapters to install sensors with rear-facing threads into process piping or sample tees. The sensor screws into a plastic adapter held in the process connector by a union nut. The rear of the adapter is threaded for a conduit connection, if required. The union connection allows the sensor to be removed without the danger of twisting and damaging the cable.

Table 1: Ordering Information and Specifications

Part number	23242-02	23242-03	2001990
Reference image			
Process connection	1½-inch male NPT (MNPT)		2-inch MNPT
Sensor connection	Connects to 1- or ¾-inch MNPT rear-facing threads on sensor	Connects to ¾-in. MNPT or ⅝-in.-11 UNC rear-facing threads on sensor	Connects to ¾-inch MNPT rear-facing threads on sensor
Materials of construction	316 stainless steel (SST), polyether ether ketone (PEEK), FKM		Chlorinated polyvinyl chloride (CPVC), PEEK, FKM
Maximum temperature	+392 °F (+200 °C)		+100 °F (+38 °C) at 100 psig (6.9 barg) OR +185 °F (+85 °C) at 45 psig (3.1 barg)
Maximum pressure	295 psig (20 barg)		
Sensor type	Compatible sensor models ⁽¹⁾		
pH/ORP	Rosemount 3900, 389, 396P, and 3500	N/A	N/A
Conductivity	Rosemount 228-21	Rosemount 228-20	Rosemount 228-21


(1) Sensor models shown are for integral cable connections. Corresponding Variopol (VP) connection sensors can also be used.

Figure 1: Insertion Adapter 23242-02 with Rosemount 228 Toroidal Conductivity Sensor (-21 Option)

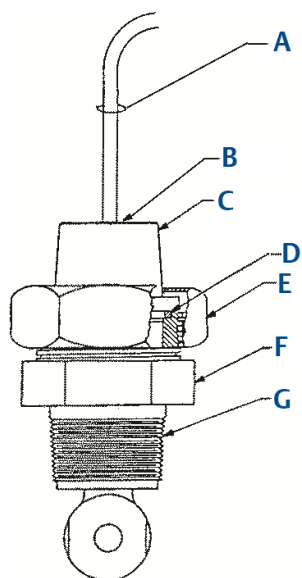


- A. Cable
- B. 1-inch female NPT (FNPT)
- C. Adapter 3/4-inch FNPT thread
- D. 2-135 FKM O-ring
- E. Nut, hex union 2 in.
- F. Neck, union fitting
- G. 1 1/2-inch MNPT

Figure 2: Insertion Adapter 23242-03 with Rosemount 228 Toroidal Conductivity Sensor (-20 Option)

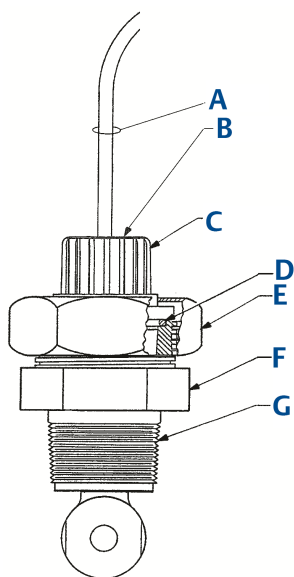

- A. Cable
- B. 3/4-inch FNPT
- C. Adapter 5/8-inch -11 UNC-2B x 3/4-inch NPT
- D. 2-135 FKM O-ring
- E. Nut, hex union 2 in.
- F. Neck, union fitting
- G. 1 1/2-inch MNPT

Figure 3: Insertion Adapter 2001990 with Rosemount 228 Toroidal Conductivity Sensor (-21 Option)

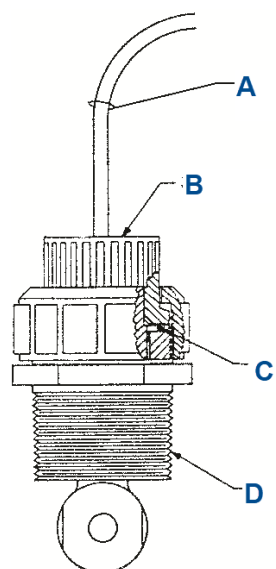

- A. Cable
- B. 3/4-inch FNPT
- C. 1-132 FKM O-ring
- D. 2-inch MNPT

Insertion mounting adapters for 1-inch diameter retractable sensors


Certain pH and ORP sensor models lack threads and must be installed in the process piping using one of the mounting adapters shown below in [Table 2](#). The sensor slides into the fitting, and a nut and ferrule tightened against the sensor tube holds the sensor in place. The insertion depth is adjustable, and the threads can be switched to face up or down for insertion installations or connection to a submersion pipe. A collar on the tube prevents the sensor from being ejected by the process pressure if the nut is not sufficiently tightened. To prevent the sensor from turning and twisting the cable while a threaded fitting is being installed or removed, loosen the nut to free the sensor.

Table 2: Ordering Information and Specifications

Part number	23166-00	23166-01	9510066
Reference image			
Process connection	1-inch male NPT (MNPT)		
Sensor connection	Connects to 1-inch outer diameter tube on retractable style sensor		
Material	316 SST	Titanium	Nylon
O-ring material	Ethylene propylene diene monomer (EPDM)		FKM
Sensor type	Compatible sensor models⁽¹⁾		
pH/ORP	Rosemount 396, 398, 396R, 398R, 3300HT, 3400HT, and RBI-547		Rosemount 396, 398, and 3300HT

(1) Sensor models shown are for integral cable connections. Corresponding Variopol (VP) connection sensors can also be used.

Figure 4: Insertion Adapter (PN 23166-00 or 23166-01) with Rosemount 396 pH Sensor

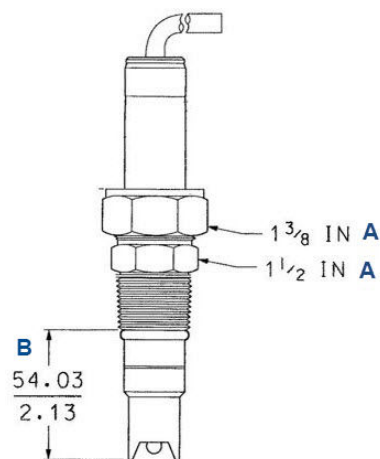


A. Hex

B. pH electrode

Note

Dimensions are in millimeters/inches.

Figure 5: Insertion Adapter (PN 9510066) with Rosemount 396 Sensor

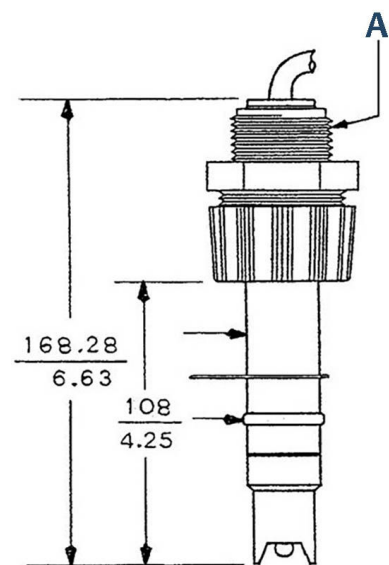

A. 1 in (25 mm) x 1 in (25 mm) NPT male connector, nylon (PN 9510066)

Note

Dimensions are in millimeters/inches.

Tri Clamp mounting adapters

Use these adapters to install threaded or retractable style sensors into 1½ or 2-inch Tri Clamp process connections.

Table 3: Ordering Information and Specifications

Part number	SQ13662 (S11099-LQD)	SQP-10098-LQD ⁽¹⁾	SQ 10904A and B
Reference image			
Process connection	1½-inch Tri Clamp	2-inch Tri Clamp	2-inch (A) or 1½-inch (B) Tri Clamp
Sensor connection	Connects to PG13.5 threads on sensor	Connects to 1-inch diameter tube on retractable style sensor	Connects to 1-inch male NPT (MNPT) threads on sensor
Materials of construction	316 stainless steel (SST), 16 Ra finish	316 SST	304 SST
Sensor type	Compatible sensor models⁽¹⁾		
pH/ORP	Rosemount Hx338+	Rosemount 396, 396R, 398R, 398, 3300HT, and 3400HT	Rosemount 389, 396P, 3500, and 3900
Dissolved oxygen	Rosemount Hx438	N/A	N/A

⁽¹⁾ Sensor models shown are for integral cable connections. Corresponding Variopol (VP) connection sensors can also be used.

In-line tee mounting adapters

These versatile in-line tees can be installed directly in process piping or in slip streams. Tees are offered in polyvinyl chloride (PVC) and chlorinated polyvinyl chloride (CPVC) and can connect to ¾-, 1-, and 1½-inch process lines. Tees with union fittings offer quick and easy access and eliminate damage from cable twisting.

Table 4: PVC Ordering Information and Specifications

Part number	915240-03	915240-04	915240-05
Reference image			
Process connection	¾-inch female NPT (FNPT)	1-inch FNPT	1½-inch FNPT
Sensor connection	Union assembly connects to 1-inch male NPT (MNPT) rear-facing threads on sensor		
Nominal tee size	2 inches		
Materials of construction	PVC, schedule 80		
O-ring material	Buna N		
Maximum rating	60 psig (4.1 barg) at +120°F (+49°C)		
Sensor type	Compatible sensor models⁽¹⁾		
pH/ORP	Rosemount 396P, 389, 3500 ⁽²⁾ , and 3900 ⁽²⁾		
Dissolved oxygen	Rosemount 499ADO		
Ozone	Rosemount 499AOZ		
Chlorine	Rosemount 499ACL		

(1) Sensor models shown are for integral cable connections. Corresponding Variopol (VP) connection sensors can also be used.

(2) Rosemount 3900 and 3500 sensors require use of PN S10283-LQD to be compatible with 915240-03, -04, or -05 in-line tees (see [Figure 6](#)).

Figure 6: PN S10283-LQD Adapter with 915240-03, 04, or -05 In-line Mounting Tee



Table 5: CPVC Ordering Information and Specifications

Part number	2002011	23567-00
Reference image		
Process connection	1-inch FNPT	1½-inch socket
Sensor connection	Connects directly to 1-in. MNPT forward facing threads on sensor	Union assembly connects to 1-in. MNPT threads on sensor
Nominal tee size	1½ inches	
Materials of construction	CPVC, schedule 80	
O-ring material	None	Buna N
Maximum rating	150 psig (10.3 barg) at +150 °F (+65 °C)	65 psig (4.1 barg) at +122 °F (+50 °C)
Sensor type	Compatible sensor models⁽¹⁾	
pH/ORP	Rosemount 396P, 389, 3500, and 3900	
Dissolved oxygen	Rosemount 499ADO	
Ozone	Rosemount 499AOZ	
Chlorine	Rosemount 499ACL	

(1) Sensor models shown are for integral cable connections. Corresponding VP connection sensors can also be used.

Standard retraction assemblies

Retraction mounting assemblies allow for sensors to be removed from the process for cleaning, service, or replacement while the process remains online. Standard and high-pressure retraction assemblies use a ball valve to isolate the process while the sensor is serviced.

Table 6: Ordering Information and Specifications


Part number	23240-00	23765-00	23724-00
Reference image			
Process connection	1½-inch female NPT (FNPT)	1¼-inch male NPT (MNPT)	1-inch MNPT
Sensor connection	Requires PN 23166-00 or 23166-01 (ordered separately) to connect to 1-inch diameter tube on retractable sensor	Connects to 1-inch diameter tube on retractable style sensor	Connects to ¾-inch diameter tube on retractable style sensor
Wetted materials	316 stainless steel (SST), PTFE		316 SST, FKM
Maximum temperature	+32 to +212 °F (0 to +100 °C)		+392 °F (+200 °C)
Maximum pressure	100 psig (6.9 barg)	200 psig (13.8 barg)	100 psig (6.9 barg)
Maximum retraction pressure	For 21-inch or shorter sensors: 64 psig (4.4 barg) For 21 to 36-inch long sensors: 35 psig (2.4 barg)		100 psig (6.9 barg)
Other information	A 1½-inch MNPT close nipple (PN 93101-02) can be used to connect ball valve to FNPT process connections.	If ball valve is already available, the retraction assembly (PN 23796-00) can be ordered alone (see Figure 7).	N/A
Sensor type	Compatible sensor models⁽¹⁾		
pH/ORP	Rosemount 396R, 398R, 3400HT, and RBI-547		N/A
Conductivity	N/A	Rosemount 402	Rosemount 140

(1) Sensor models shown are for integral cable connections. Corresponding Variopol (VP) connection sensors can also be used.

Figure 7: Retraction Assembly without Ball Valve (PN 23796-00)



Figure 8: Retraction Assembly (PN 23240-00) and Process Connector (PN 23166-00 or 23166-01) with Rosemount 396R pH Sensor

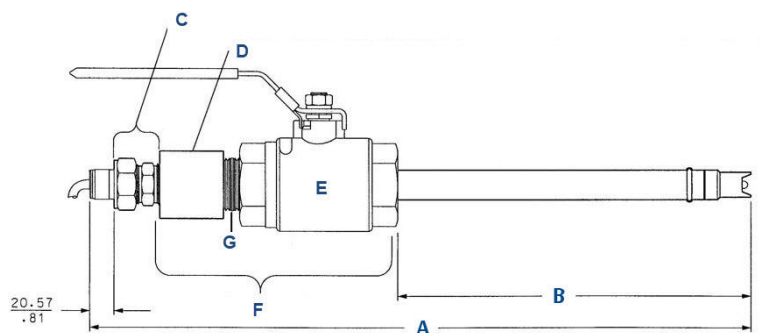

- A. Dimension (see [Table 7](#))
- B. Dimension (see [Table 7](#))
- C. Process connector (PN 23166-00 or 23166-01) (not included with ball valve kit)
- D. 1½-inch (38 mm) to 1-inch (25 mm) reducer (PN 9310104)
- E. Ball valve (PN 9340065)
- F. Ball valve kit (PN 23240-00)
- G. 1½-inch close nipple (PN 9310102)


Note

Dimensions are in millimeters/inches.

Table 7: Rosemount 396R Insertion Lengths for Retraction Assembly 23240-00

Sensor tube length	A	B (maximum)
21 in. (533 mm)	23 in. (587 mm)	12.9 in. (328 mm)
36 in. (914 mm)	37.58 in. (955 mm)	27.4 in. (696 mm)


Figure 9: Retraction Assembly (PN 23765-00) with Rosemount 402 Conductivity Sensor

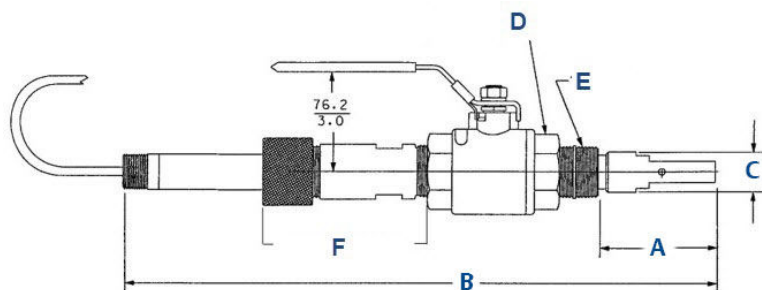

- A. Dimension (see [Table 8](#))
- B. Dimension (see [Table 8](#))
- C. 1.19 in. (30 mm)
- D. 1¼-inch full port ball valve (PN 9340078)
- E. 1¼-inch to 1½-inch NPT nipple (PN 4342M)
- F. Retraction kit (PN 23796-00)

Table 8: Rosemount 402 Insertion Lengths for Retraction Assembly 23765-00

Description	Assembly kit	A	B in. (mm)
Rosemount 402-11	23765-00	Customer-defined based on insertion depth	17.25 (438)
Rosemount 402-12	23765-00	Customer-defined based on insertion depth	16.37 (416)
Rosemount 402-13	23765-00	Customer-defined based on insertion depth	16.37 (416)

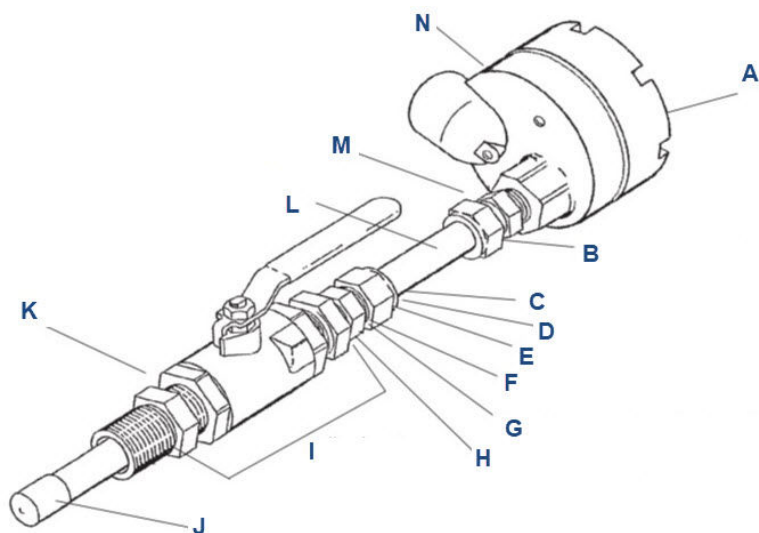Figure 10: Rosemount Sensor with Ball Valve Kit (PN 23724-00)

- A. Junction box cover
- B. Junction box compression fitting (PN 9310120)
- C. Sensor compression fitting nut⁽¹⁾
- D. Polyether ether ketone (PEEK) split ring (inside)⁽¹⁾
- E. PEEK ferrule (inside)⁽¹⁾
- F. Compression fitting body⁽¹⁾
- G. Viton[®] O-ring (inside) (PN 9550200)
- H. Reducing bushing
- I. Ball valve kit (PN 23724-00)
- J. Flared mechanical stop
- K. 1-inch (25 mm) NPT hex nipple
- L. Sensor tube
- M. Nylon ferrule (inside)
- N. Junction box

(1) Included in kit PN 23730-00


High pressure retraction assemblies

Table 9: Ordering Information and Specifications

Part number	23311-00	23311-01
Reference image		
Process connection	1½-inch male NPT (MNPT) connection to ball valve (sold separately)	
Sensor connection	Connects to ¾-11 threads on sensor	
Wetted materials	316 stainless steel (SST), PTFE, EP	
Maximum operating temperature	+392 °F (+200 °C)	
Maximum operating pressure	295 psig (20 barg)	
Maximum retraction pressure	295 psig (20 barg)	35 psig (3 barg)
Maximum insertion travel	10½ in. (267 mm)	12 in.(305 mm)
Maximum insertion travel using PN 9340065	6½ in. (165 mm)	8 in. (203 mm)
Weight/shipping weight	12/15 lb. (5.5/7.0 kg)	9/12 lb. (4.5/5.5 kg)
Other information	Requires ball valve PN 9340065 (sold separately)	
Sensor type	Compatible sensor models⁽¹⁾	
pH/ORP	Special order required, consult factory	
Conductivity	Rosemount 228-20	

⁽¹⁾ Sensor models shown are for integral cable connections. Corresponding Variopol (VP) connection sensors can also be used.


Figure 11: Manual Retraction Assembly PN 2311-01 Dimensional Drawing

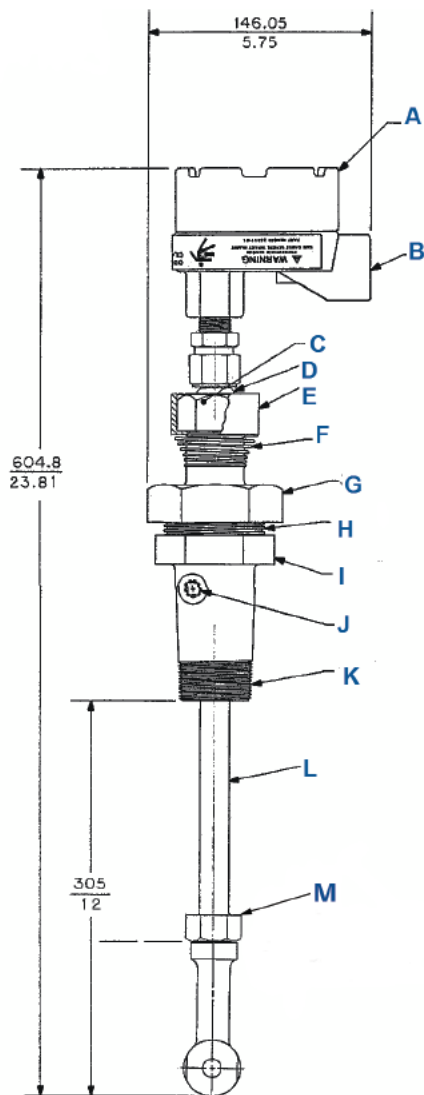

- A. Junction box with screw cap
- B. 3/4-inch female NPT (FNPT)
- C. Collet nut
- D. Collet
- E. Nut guard
- F. Nut guard spring
- G. 3-inch hex union nut
- H. 2.531-inch 8 ACME thread
- I. 2 5/8-inch hex retraction chamber
- J. 1/8-inch MNPT plug
- K. 1 1/2-inch MNPT
- L. 316 stainless steel 3/4-inch outer dimension (OD) tube
- M. Manual retraction assembly

Note

Dimensions are in millimeters/inches.

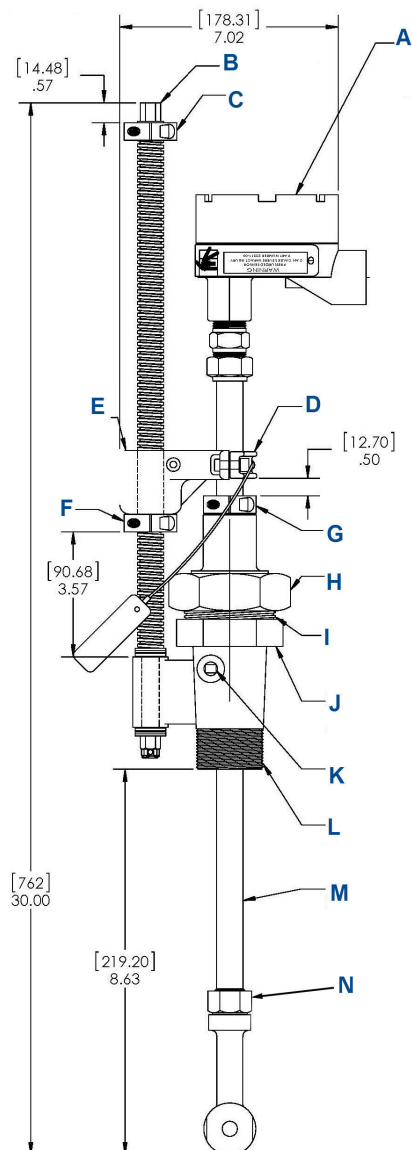Figure 12: Mechanical Retraction Assembly PN 23311-00 Dimensional Drawing

- A. Junction box with screw cap
- B. Lead screw
- C. Travel stop collar "B"
- D. Cap
- E. Nut housing
- F. Travel stop collar "A"
- G. Retraction stop collar
- H. 3-inch hex union nut
- I. 2.531-inch 8 ACME thread type
- J. 2½-inch hex retraction chamber
- K. ⅛-inch MNPT plug type
- L. 1½-inch MNPT
- M. Ø ¾-inch tube 316 stainless steel
- N. Mechanical retraction assembly

Note

Dimensions are in millimeters/inches.

Table 10: Ball Valve Ordering Information and Specifications

Part number	9340065
Process connection	1½-inch FNPT
Sensor connections	Connects to 1½-inch MNPT threads on 23311-00 or 23311-01 retraction assembly
Wetted materials	316 SST, PTFE
Maximum temperature and pressure	+382 °F (194 °C) at 295 psig (20 barg) OR +392 °F (+200 °C) at 251 psig (17.3 barg)

Low flow cells

Low flow cells are suitable for many installations, especially applications where it is impractical to divert a larger volume of sample, particularly if the sample must be sent to waste. Valved rotameters are also available to adjust and measure sample flow in side-stream applications. Accurate control of flow is especially important when measuring dissolved oxygen, chlorine, and ozone.


Table 11: Polycarbonate Low Flow Cell Ordering Information and Specifications

Part number	24091-00	24091-01	24091-02
Reference image			
Process connection	¼-inch female NPT (FNPT) inlet and outlet ⁽¹⁾		
Sensor connection	Connects to 1-inch male NPT (MNPT) threads on sensor		Connects to ¾-inch MNPT threads on sensor
Wetted materials	Body and nut: Polycarbonate/polyester blend; ¼-inch fittings: 316 stainless steel (SST); O-ring: silicone		
Maximum temperature	+158 °F (+70 °C)		
Maximum pressure	90 psig (6.2 barg)		
Special features	None	Bubble shedding nozzle (not shown in reference image)	None
Sensor type	Compatible sensor models⁽²⁾		
pH/ORP	Rosemount 396P, 389, 3500, and 3900	N/A	N/A
Conductivity	N/A	N/A	Rosemount 400
Dissolved oxygen	Rosemount 499ATrDo and 499ADO	Rosemount 499ADO	N/A
Ozone	Rosemount 499AOZ	N/A	N/A
Chlorine	Rosemount 499ACL		N/A

(1) Flow cell has ¼-inch FNPT inlet and outlet and is supplied with optional ¼-inch male NPT (MNPT) to ¼-inch outer dimension (OD) tubing fittings.

(2) Sensor models shown are for integral cable connections. Corresponding Variopol (VP) connection sensors can also be used.

Figure 13: Low Flow Cell (PN 24091-00)

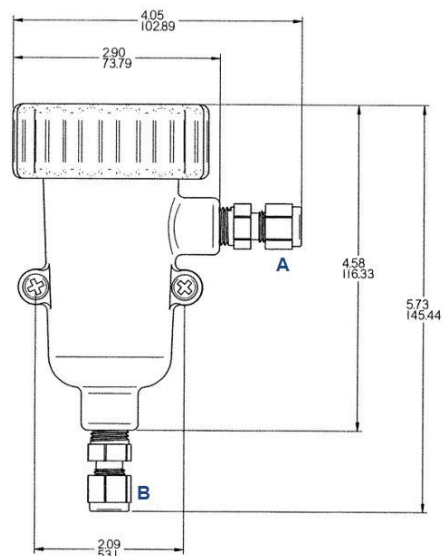

- A. Outlet
- B. Inlet

Note
Dimensions are in inches/millimeters.

Table 12: Stainless Steel Low Flow Cell Ordering Information and Specifications

Part number	S10240 (SQ 7716)	S10290 (SQ 7637)
Reference image		
Process connection	¼-inch FNPT inlet and outlet	
Sensor connection	Connects to 1-inch MNPT threads on sensor	Connects to ¾-inch MNPT threads on sensor
Wetted materials	316 SST	
Maximum temperature	+392 °F (+200 °C)	
Maximum pressure	250 psig (17.2 barg)	
Sensor type	Compatible sensor models ⁽¹⁾	
pH/ORP	Rosemount 396P, 389, 3500, and 3900	Rosemount RBI-546
Conductivity	N/A	Rosemount 400
Dissolved Oxygen	Rosemount 499ADO	N/A

(1) Sensor models shown are for integral cable connections. Corresponding Variopol (VP) connection sensors can also be used.

Low flow panel

The low flow panel uses gravity to control flow, eliminating the need for pressure regulators, valves, and rotameters.

The overflow sampler consists of two concentric tubes with the annular space closed at the bottom. The sample enters through a fitting at the bottom of the outer tube and fills the annular space between the tubes, eventually overflowing into the inner tube and running to drain. A second fitting on the outside tube connects to a low flow cell, which holds the sensor. The outlet from the low flow cell joins the drain from the overflow sampler.

The flow of sample to the sensor is controlled by the slight head pressure of the outer tube. The flow controller provides a steady flow of 2 gph (7.5 liters per hour) if the inlet flow is in the specified range of 3–80 gph (11.4–304 liters per hour).

Figure 14: PN 00390-7101-0001 Low Flow Panel with Rosemount 3900 pH Sensor




Table 13: Ordering Information and Specifications

Part number	00390-7101-0001
Process connection	Sample inlet fitting is ¼-inch female NPT (FNPT)
Inlet flow	3–80 gallons per hour (11.4–304 liters per hour)
Inlet pressure ⁽¹⁾	3–65 psig (0.2 barg–4.5 barg)
Temperature	+32 to +122 °F (0 to +50 °C)
Sensor type	Compatible sensor models⁽²⁾
pH/ORP	Rosemount 396, 389, 3500, and 3900
Dissolved Oxygen	Rosemount 499ATrDo and 499ADO
Ozone	Rosemount 499AOZ
Chlorine	Rosemount 499ACL

(1) The minimum inlet pressure is required to open a check valve, which prevents the flow cell from draining if sample flow is lost. Removing the check valve lowers the inlet pressure requirement to a few feet of water head.

(2) Sensor models shown are for integral cable connections. Corresponding Variopol (VP) connection sensors can also be used.

Figure 15: Low Flow Panel (PN 00390-7101-0001)

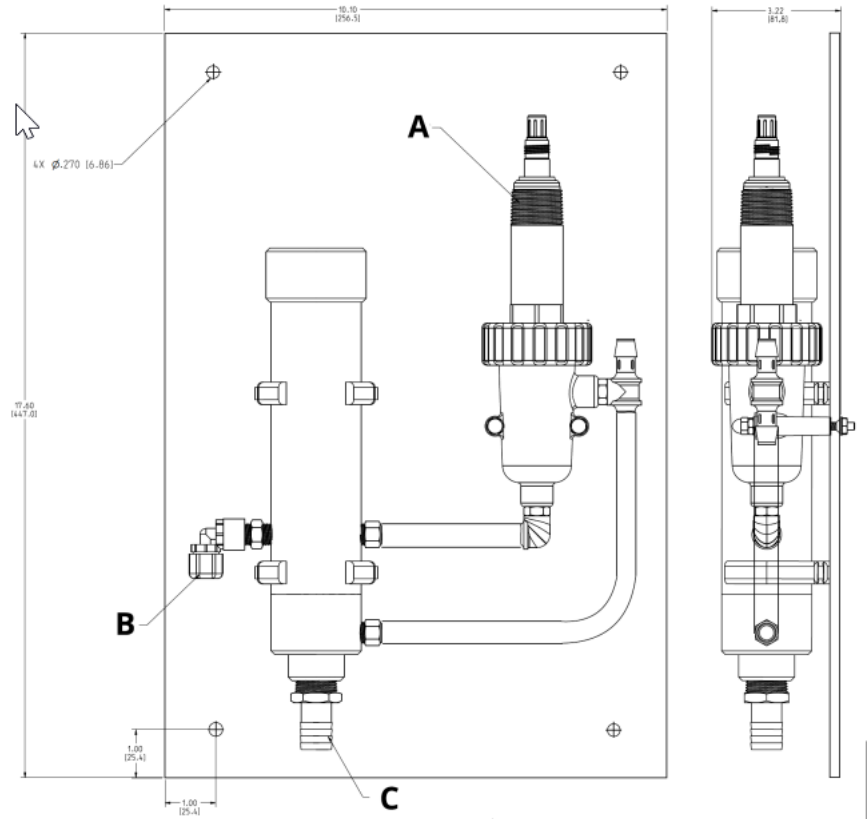

- A. pH sensor and VP cable not included
- B. 1/4-in. tube fitting
- C. 3/4-in. barbed fitting

Note

Dimensions are in inches/millimeters.


Table 14: Low Flow Panel Spare Parts Ordering Information

Part number	Description
24039-01	Flow cell without bubble shedding nozzle
24040-00	O-ring kit, two 2-222 and one 2-024 silicone O-rings with lubricant
33812-00	Dust cap for constant head flow controller
9322032	Elbow, 1/4-inch FNPT x 1/4-inch outer dimension (OD) tubing
9350029	Check valve, 1/4-inch FNPT
33823-00	Outside tube for constant head device
SQP10009-LQD (SQ 9373)	Constant head flow controller only (no flow cell)

Rotameters for sample flow control

Emerson offers a variety of rotameters with integral valves to help measure and control flow in side-stream samples.

Table 15: Ordering Information and Specifications

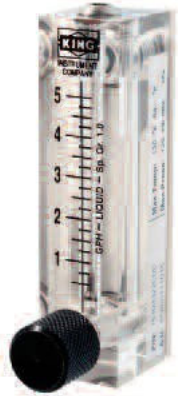Part number	9390004	196-898754
Reference image		
Process connections	¼-inch female NPT (FNPT), 316 stainless steel (SST)	½-inch FNPT (brass)
Wetted materials	Acrylic, 316 SST, FKM	Polycarbonate, 316 SST, brass, Buna-N
Maximum temperature	+130 °F (+54 °C)	
Maximum pressure	100 psig (6.9 barg)	
Required range of flow	0.4–5.0 gal/hr (1.5–19.0 L/hr)	2.0–20.0 gal/hr (7.6–76.0 L/hr)
Sensor type	Compatible sensor models⁽¹⁾	
pH/ORP	All pH sensor models: 2-5 gal/hr (7.6–19 L/hr)	
Dissolved oxygen	Rosemount 499ADO: 2-5 gal/hr (7.6-19 L/hr)	N/A
Ozone	Rosemount 499AOZ: 2-5 gal/hr (7.6-19 L/hr)	N/A
Chlorine	N/A	Rosemount 499ACL: 8-15 gal/hr (30-57 L/hr)

(1) Recommended flow rates are shown for each sensor model when used with low flow cells.

Submersion mounting adapters

Table 16: Ordering Information and Specifications

Part number	9320057
Reference image	
Process connections	1-inch female NPT (FNPT) rear-facing threads on adapter for connection to submersion pipe
Sensor connection	Connects to 1-inch male NPT (MNPT) rear-facing threads on sensor
Material of construction	Polyvinyl chloride (PVC), Schedule 80
Maximum temperature	Ambient
Maximum pressure	Ambient
Sensor style	Compatible sensor models⁽¹⁾
pH/ORP	Rosemount 396P, 389, 3500, and 3900
Dissolved Oxygen	Rosemount 499ADO
Ozone	Rosemount 499AOZ
Chlorine	Rosemount 499ACL

(1) Recommended flow rates are shown for each sensor model when used with low flow cells.

HandRail mounting systems

The Emerson HandRail Mounting System (HRMS) and Floating Ball System (BB11) enable convenient installations whenever a pH, ORP, or dissolved oxygen sensor must be installed in a tank, aeration basin, pond, or open channel.

See the [HandRail Mounting System Product Data Sheet](#) for more information on these products.

Jet spray cleaner

The jet spray cleaner is intended for use with pH, ORP, or oxygen sensors. It directs a spray of air, water, or other cleaning fluid at the end of the sensor, flushing away suspended solids that have accumulated.

Only use the cleaner if the sensor is installed in a tank or basin; it is not suitable for in-pipe installations.


An interval timer in the analyzer controls cleaning frequency and spray duration. During cleaning, you can program the analyzer to hold the last reading, thus avoiding spurious outputs and relay actions. This hold can be continued beyond the end of the cleaning period, allowing the sensor time to stabilize before the analyzer returns to normal operation. Cleaning intervals and frequency and the best cleaning agent can be determined only by experience; several trials will likely be necessary to determine the best program.

Table 17: Ordering Information and Specifications

Part number	12707-00
Reference image	
Process connections	2-inch male NPT (MNPT) rear facing threads or use sensor/conduit
Sensor connection	Connects to 1-inch MNPT threads on sensor
Wetted materials	316 stainless steel (SST), polypropylene, polyvinyl chloride (PVC)
Maximum temperature	+212 °F (+100 °C)
Maximum pressure	50 psig (3.4 barg)
Sensor type	Compatible sensor models⁽¹⁾
pH/ORP	Rosemount 396P, 389, 3500, and 3900
Dissolved oxygen	Rosemount 499ADO
Ozone	Rosemount 499AOZ
Chlorine	Rosemount 499ACL

(1) Recommended flow rates are shown for each sensor model when used with low flow cells.

Figure 16: Jet spray cleaner

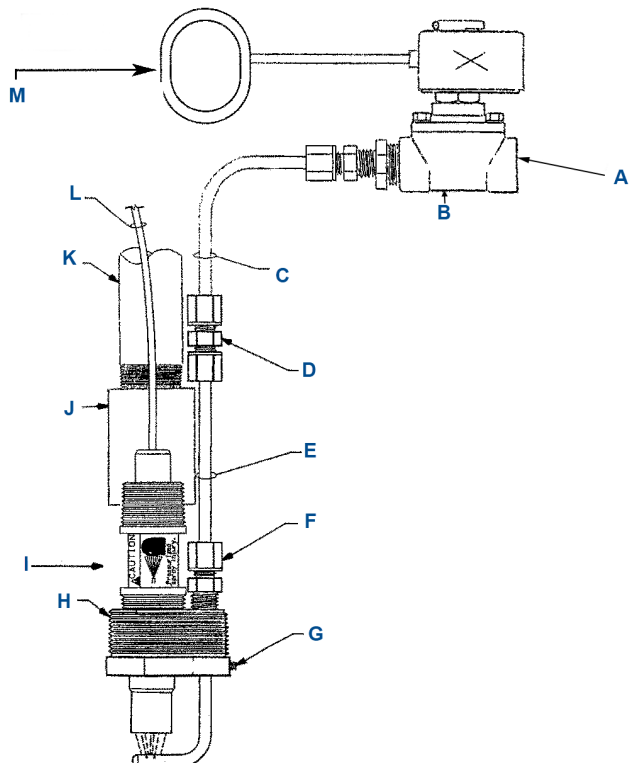

- A. Cleaning solution (supplied by customer)
- B. Solenoid valve or manual valve (supplied by customer)
- C. Corrosion resistant tubing (supplied by customer)
- D. Polypropylene ¼-in. (6.4 mm) compression fitting
- E. ¼-in. (6.4 mm) 316 stainless steel
- F. ¼-in. (6.4 mm) polypropylene
- G. Stainless set screw for adjustable spray nozzle height
- H. 2-in. (50.8 mm) NPT threads
- I. Sensor
- J. 1-in. (25.4 mm) PVC coupling for submersible applications (supplied by customer)
- K. 1-in. (25.4 mm) PVC or stainless conduit (supplied by customer)
- L. Cable
- M. Timer supplied by customer or use timer feature in Rosemount instrument

Figure 17: Jet spray cleaner with pH sensor



Junction boxes and preamplifiers

Emerson offers junction boxes and extension cables to support liquid analysis measurement installations with longer runs of cable between the sensor and the transmitter.


Emerson remote junction boxes are weather-proof and are available with or without preamplifiers for a wide variety of sensor types. To replace the sensor, disconnect the cable at the junction box. The cable between the junction box and the analyzer never needs to be disturbed.

Junction Box PN 23550-00 is used for extending any Rosemount liquid analysis sensor cable by connecting the sensor cable to an internal extension board. Junction box PN 23555-00 is used for pH and ORP analog sensors only and has a preamplifier board (PN 23557-00) mounted internally. In addition to remote mount junction boxes, Emerson also offers a sensor-head mounted junction box with a preamplifier for retractable style pH/ORP sensors. Extension cables for connecting junction boxes to the transmitter are sold separately.

Table 18: Junction Box Ordering Information and Specifications

Part number	23550-00	23555-00	23709-00
Reference image			
Preamplifier	None	Includes preamplifier PN 23557-00 with FM, CSA, and ATEX intrinsically safe hazardous location approvals	
Mounting	Mounts to wall or pipe using mounting bracket PN 2002565 (ordered separately)		Mounts to back of Rosemount retractable pH/ORP sensors using a compression fitting
Dimensions	Height x width x depth: 5 x 8.25 x 4 in. (127 x 210 x 102 mm)		Height x width x depth: 3/8 x 4 x 5 in. (10 x 102 x 127 mm)
Material of construction	ABS plastic		Aluminum alloy
Compatible sensor models	Most Rosemount liquid analysis sensors other than pH/ORP sensors without preamp. See Table 19 for detail.	Any Rosemount pH/ORP sensor without a preamp. See Table 19 for detail.	Rosemount pH/ORP sensors 396R, 398R, 3400HT, and RB547 options without a preamp.
Compatible transmitter models	Rosemount 56, 1056, 1057, 1066, and 5081		

Figure 18: Junction boxes PN 23550-00 and PN 23555-00 Dimensional Drawing

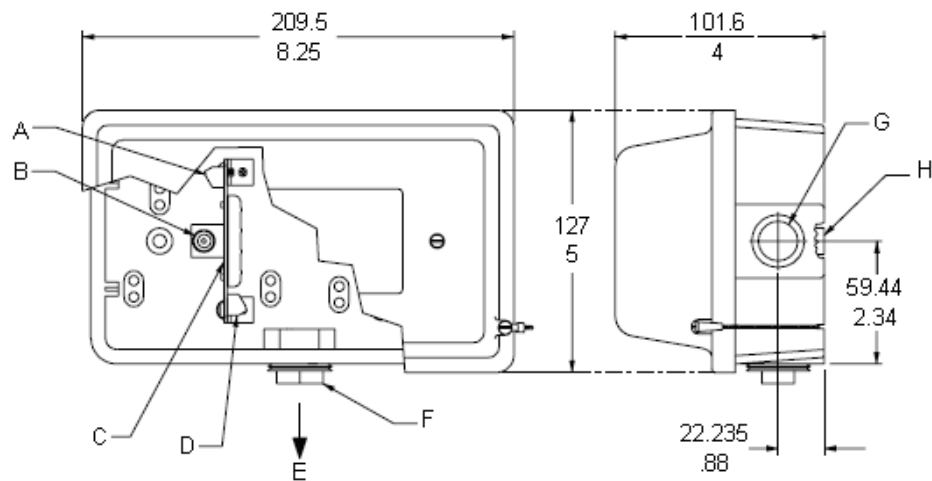

Note


Dimensions are in millimeters/inches.

- A. Terminal block (TB) 1
- B. BNC
- C. Preamp assembly with cover
- D. TB2
- E. To sensor
- F. 3/4-inch NPT plug
- G. 3/4-inch female pipe thread (FPT) to analyzer
- H. Mounting insert No. 10-32, two places

Figure 19: Junction Box PN 23550-00 has an Extension Board but no Preamplifier



Figure 20: Junction Box PN 23555-00 has a Preamplifier

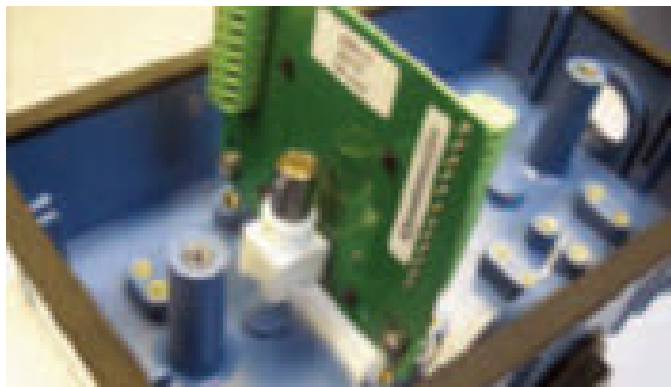


Remote junction boxes can be mounted to a wall or a pipe of up to 2 in. (51 mm) diameter with mounting bracket PN 2002565. This mounting bracket includes a stainless steel (SST) U-bolt and SST screws and washers needed for mounting.

Figure 21: PN 2002565 Mounting Bracket for Remote Junction Boxes, PN 23550-00 and PN 23555-00



Cable glands should be used to seal the cable where it enters the transmitter or junction box. Cable glands also prevent the weight of the cable from pulling on and dislodging wiring connections in the analyzer. Cable gland kit PN 23554-00 provides five cable glands that fit all Rosemount liquid analysis transmitters and junction boxes.

Figure 22: Cable Gland Kit PN 23554-00 Includes Five Cable Glands

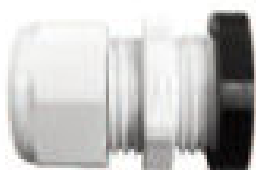

Extension cable for long distance sensor wiring

Emerson offers junction boxes and extension cables to support liquid analysis measurement installations with longer runs of cable between the sensor and the transmitter.

[Table 19](#) provides compatibility and ordering information for extension cables, as well as recommendations for maximum cable length for each type of Rosemount liquid analysis sensor. When using this table to design a sensor wiring architecture, the following best practices should be considered:

- The maximum distances listed are recommendations only.
- Long cable distances may degrade the signal. For best performance, install long cable runs in a noise-free environment.
- For contacting conductivity sensors, long cable runs will result in some loss of linearity.
- An Emerson wireless solution may be a better choice than using extended wire lengths for some applications.
- When using a remote junction box, install the junction box close to the sensor and use an extension cable to run the signal from the junction box to the instrument.
- The use of factory prepared cable is strongly recommended. The cables designated as “prepped” are prepared with the cable jacket and wires stripped and ready for a quick installation.

Table 19: Extension Cable Ordering Information and Distance Recommendations

Measurement	Sensor model or type	Maximum cable length		Junction box part number	Extension cable part number ⁽¹⁾	
		Sensor to junction box	Sensor to transmitter total ⁽²⁾		Prepped	Unprepped
pH/ORP	No preamp in sensor	50 ft. (15 m)	200 ft. (61 m)	23555-00	23646-01	9200273
	Preamplifier in sensor	50 ft. (15 m)	200 ft. (61 m)	33550-00		
	Preamplifier in sensor mounted junction box	N/A	200 ft. (61 m)	Included		
Contacting conductivity ⁽³⁾	Sensor mounted junction box	N/A	200 ft. (61 m)	N/A	23747-00	9200275
	No sensor mounted junction box	50 ft. (15 m)	200 ft. (61 m)	23550-00		
Toroidal conductivity	Rosemount 225, 226, 228	50 ft. (15 m)	200 ft. (61 m)	23550-00	23294-05	9200276
	Rosemount 202	50 ft. (15 m)	100 ft. (30 m)			
	Rosemount 242, 245	N/A	200 ft. (61 m)	23550-00	23909-00	
Chlorine, dissolved oxygen, and ozone	Rosemount 499ACL, 499AOZ, 499ADO	50 ft. (15 m)	200 ft. (61 m)	23550-00	23747-00	9200275

(1) 9200273 is the raw cable for prepped cable 23646-01. 9200275 is the raw cable for prepped cable 23747-00. 9200276 is the raw cable for prepped cables 23909-00, 23294-00 (unshielded), 23294-04 (shielded for improved electromagnetic interference/radio frequency interference [EMI/RFI] protection), and 23294-05 (shielded with additional shield wire).

(2) Maximum cable lengths listed for “sensor-to-transmitter total” include the length of sensor cable between the sensor and the junction box plus the length of extension cable between the junction box and transmitter. For instance, if the cable from the sensor to the junction box is 50 ft. (15 m), the maximum extension cable length from the junction box to the transmitter should be 150 ft. (45m).

(3) Excludes conductivity sensor Rosemount 410VP. For 410VP, the correct extension cable part number is 24289-00.

Calibration buffers and standard solutions

Emerson offers a range of calibration buffers and standard solutions for use with its pH, oxidation reduction potential (ORP), and conductivity sensors.

For pH, Emerson offers pH 4.01, pH 6.86, and pH 9.18 National Institute of Standards and Technology (NIST) buffer solutions that meet most pH calibration requirements. Accuracy is ± 0.02 pH at +77 °F (+25 °C). A chart listing the pH of the buffer at other temperatures is provided on the label.

Table 20: pH Buffer Ordering Information and Specifications

Part number	Description	Size
9210012	pH 4.01 buffer solution	16 oz. (473 ml)
9210013	pH 6.86 buffer solution	16 oz. (473 ml)
2210014	pH 9.18 buffer solution	16 oz. (473 ml)

Emerson offers a 475 mV ORP (redox) standard solution that meets most ORP sensor calibration requirements.

Table 21: ORP Calibration Standard Solution Ordering Information and Specifications

Part number	Description	Size
R508-8oz	ORP calibration standard 460 ± 10 mV	8 oz. (237 ml)

Emerson offers conductivity standard solutions ranging from 200–5000 $\mu\text{S}/\text{cm}$. To determine the best standard to use, consult the transmitter product data sheet and choose a standard with a conductivity value in the recommended range for the sensor cell constant.

Table 22: Conductivity Calibration Standard Solution Ordering Information and Specifications

Part number	Description	Size
05010781899	Conductivity standard solution, 200 $\mu\text{S}/\text{cm}$	1 qt. (0.95 liter)
05010797875	Conductivity standard solution, 200 $\mu\text{S}/\text{cm}$	1 gal. (3.8 liter)
05010782468	Conductivity standard solution, 1000 $\mu\text{S}/\text{cm}$	1 qt. (0.95 liter)
05010783002	Conductivity standard solution, 1000 $\mu\text{S}/\text{cm}$	1 gal. (3.8 liter)
05000705464	Conductivity standard solution, 1409 $\mu\text{S}/\text{cm}$	1 qt. (0.95 liter)
05000709672	Conductivity Standard Solution, 1409 $\mu\text{S}/\text{cm}$	1 gal. (3.8 liter)
9210004	Conductivity standard solution, 2000 $\mu\text{S}/\text{cm}$	0.53 qt. (0.5 liter)
05000706787	Conductivity standard solution, 2000 $\mu\text{S}/\text{cm}$	1 qt. (0.95 liter)
05000708083	Conductivity standard solution, 2000 $\mu\text{S}/\text{cm}$	1 gal. (3.8 liter)
05010782147	Conductivity standard solution, 5000 $\mu\text{S}/\text{cm}$	1 qt. (0.95 liter)
05010782026	Conductivity standard solution, 5000 $\mu\text{S}/\text{cm}$	1 gal. (3.8 liter)

Conductivity Validation Unit

The Conductivity Validation Unit (CVU) consists of a factory-calibrated Rosemount 1056 Intelligent Four-Wire Transmitter and a Rosemount 404 Low Flow Conductivity Sensor housed in a rugged carrying case.

The CVU is ideal for applications where calibrating a conductivity sensor against a standard solution is impractical. This includes sensors that cannot easily be removed from the process piping and sensors having 0.01/cm cell constants for which stable low conductivity calibration standards are not available. The CVU is widely used for calibrating conductivity sensors in water for injection applications.

Using the CVU is easy:

1. Connect the 404 Sensor in series with the process sensor using the tubing provided with the CVU.
2. Allow the sample to flow past both sensors.
3. Once readings are stable, adjust the process analyzer reading to match the CVU reading.

The calibration system is completely enclosed. The solution never contacts atmospheric carbon dioxide, which can contaminate low conductivity standards, leading to erroneous calibration. Thus, the CVU is ideal for calibrating 0.01/cm cell constant sensors. The CVU is available in two versions as shown in [Table 23](#).

Figure 23: Conductivity Validation Unit



Table 23: Ordering Information and Specifications

Part number	Number of sensors	Description
CVU-01	1	One 404-11-17 stainless steel sensor with a 0.01 cell constant pre-wired to the 1056-01-20-38-AN analyzer
CVU-02	2	One 404-11-17 stainless steel sensor with a 0.01 cell constant and one 404-12-17 stainless steel sensor with a 0.1 cell constant prewired to the model 1056-01-20-30-AN analyzer

For more information: [Emerson.com/global](https://emerson.com/global)

©2025 Emerson. All rights reserved.

Emerson Terms and Conditions of Sale are available upon request. The Emerson logo is a trademark and service mark of Emerson Electric Co. Rosemount is a mark of one of the Emerson family of companies. All other marks are the property of their respective owners.

ROSEMOUNT™

